


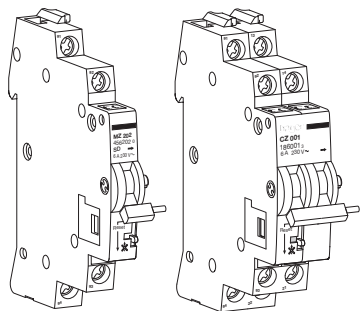

- (F) Contact signal défaut
- (GB) Auxiliary contacts and alarm indication
- (D) Signalkontakt
- (I) Contatti ausiliari di segnalazione guasto
- (P) Contacto sinal defeito
- (E) Contacto auxiliar de defecto

Notice d'instructions

User instructions

Bedienungsanleitung


Istruzioni d'uso

Instruções de instalação


Instrucciones de uso

## MZ 202, CZ 001

MZ 202

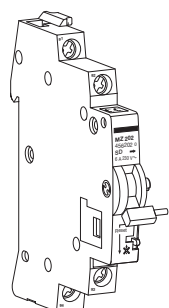


Alarm contact

 


6 A 230 V~

CZ 001


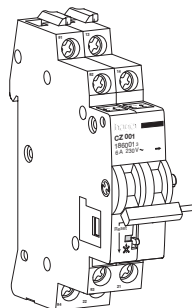


Alarm contact

 


6 A 230 V~

 
Auxiliary contact

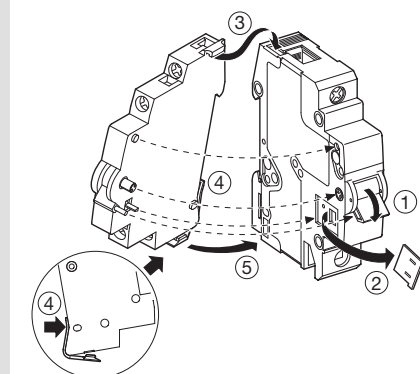










MZ 202

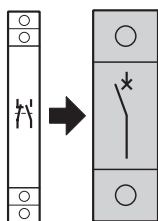


MZ 201 MZ 202

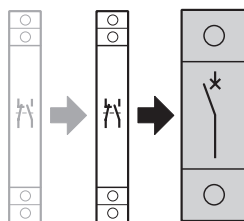

CZ 001 Only RCCB

     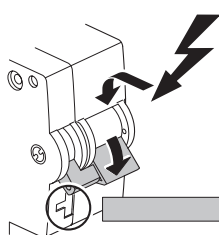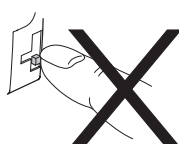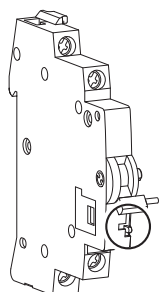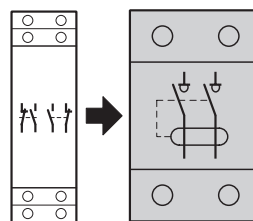

OR

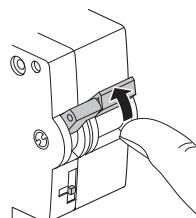

Contacts test

