



- (F) Tore pour relais différentiels
- (GB) Torroid for HR relays
- (D) Wandler für FI Relais
- (N) Spole for jordfeilreleer HR
- (I) Toro per rele HR
- (E) Trafo diferencial
- (P) Toro para rele HR

- Notice d'instructions
- User instructions
- Bedienungsanleitung
- Bruksanvisning
- Istruzioni d'impiego
- Instrucciones de uso
- Instruções


HR 800, HR 801, HR 802, HR 803, HR 804, HR 805, HR 830, HR 831, HR 832

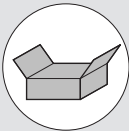


HR 800

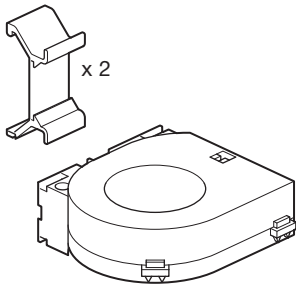


HR 801 → HR 832

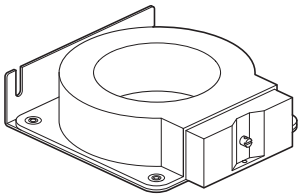


HR 800

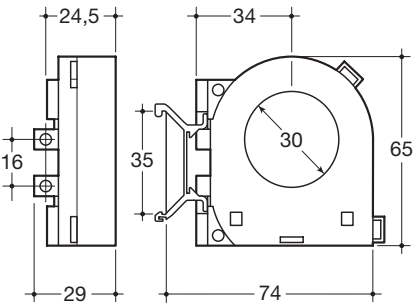





HR 800 + ⌋

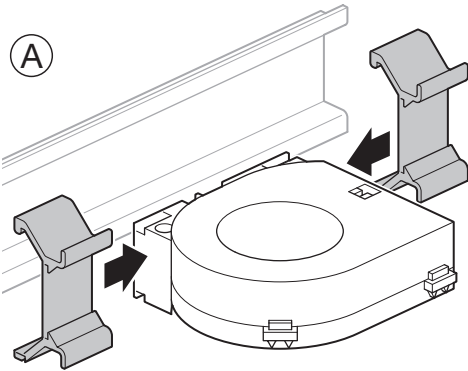

(B)

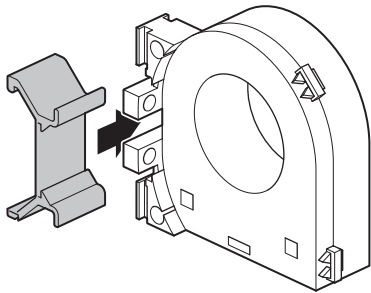

HR 801 → HR 832

  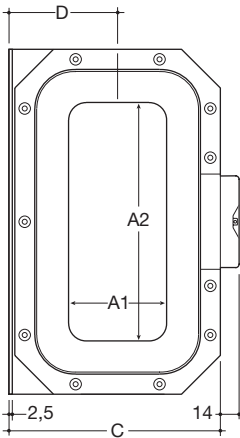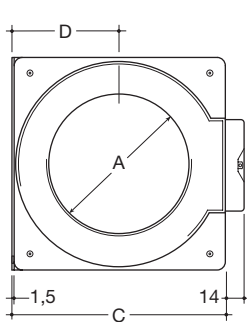

	HR 801	HR 802	HR 803	HR 804	HR 805	HR 830	HR 831	HR 832
A	Ø 35	Ø 70	Ø 105	Ø 140	Ø 210			
A1						70	115	150
A2						175	305	350
B	92	115	158	202	290	260	400	460
C	86	118	162,5	203	295	162	225	270
D	43,5	60,5	84,5	103,5	150	85	116	140
E	74	97	140	178	265	225	360	415
F	17	17	15	21	23	22	25	28
G	32,5	32,5	32,5	32,5	32,5	40	48	48
H	5,5	5,5	5,5	7,5	7,5	7,5	8,5	8,5

