

Identification	Part No.	Drawing	Dimensions in mm
HARTING crimping tool with locator for Han D®, Han E®, Han® C	09 99 000 0110	Wire gauge 0.5 - 4 mm ²	
HARTING-Service crimping tool with locator	09 99 000 0021	Wire gauge 0.5 - 2.5 mm ²	
BUCHANAN- crimping tool	09 99 000 0001	Wire gauge 0.5 - 4 mm ²	 ↑ order separately
Locator	09 99 000 0310		
Crimping tool depth adjustment gauge	09 99 000 0203 09 99 000 0125 09 99 000 0007 09 99 000 0008 09 99 000 0006	Wire gauge 0,14 - 0,25 mm ² ø 1,00 0,37 mm ² ø 1,30 0,5 - 1 mm ² ø 1,55 1,5 - 2,5 mm ² ø 1,80 4 mm ² ø 2,00	
HARTING- pneumatic crimping tool	09 99 000 0314	Wire gauge 0.14 - 0.25 mm ² ø 1.00 0.37 mm ² ø 1.30 0.5 - 1 mm ² ø 1.55 1.5 - 2.5 mm ² ø 1.80 4 mm ² ø 2.00	 ↑ order separately
Locator	09 99 000 0310		
Crimping tool depth adjustment gauge	09 99 000 0203 09 99 000 0125 09 99 000 0007 09 99 000 0008 09 99 000 0006		
Table fixing and foot switch for pneumatic crimping tool	09 99 000 0309		
Insertion tool for crimp contacts	09 99 000 0059		For crimp contacts wires of less than 0.75 mm ² it is recommended that an insertion tool is used. Contacts should be inserted from the wiring side and pushed down until a positive locking is achieved.
Removal tool for Han® ES inserts	09 99 000 0367		
Crimp contact removal for Han® EE, Han® Q 5/0, Han® Q 8/0 Han E® and Han A®	09 99 000 0319		A removal tool is necessary if contacts are to be replaced in the insert. The tool is inserted from the wiring side until a stop is noticeable. The wire with the crimp contact can then be pulled out from the same side of the insert.